



Parts List

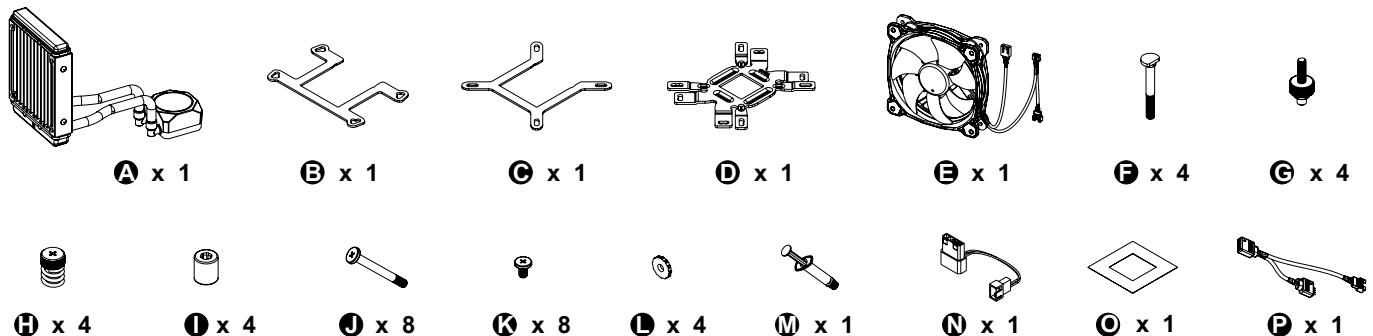


Intel Installation Guide

1


- Ⓐ 1366
- Ⓑ 1156/1155/1151/1150
- Ⓒ 775

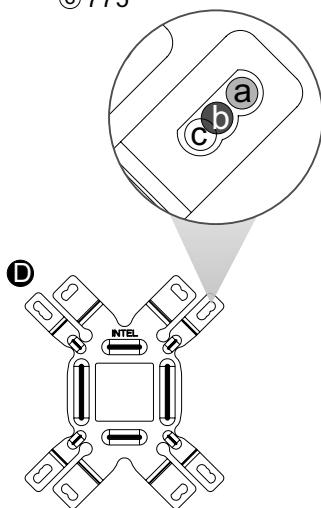


2

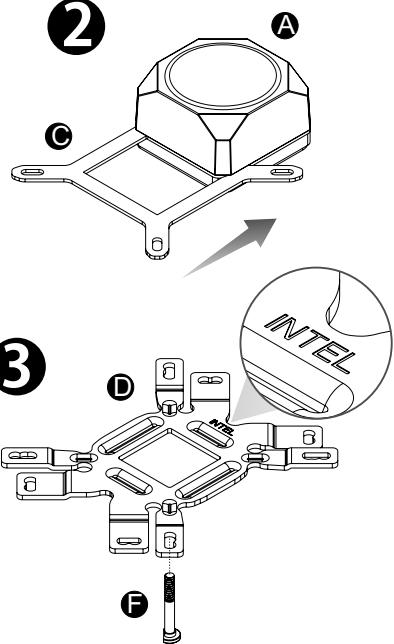

3

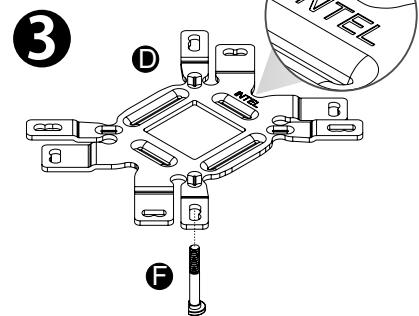

4

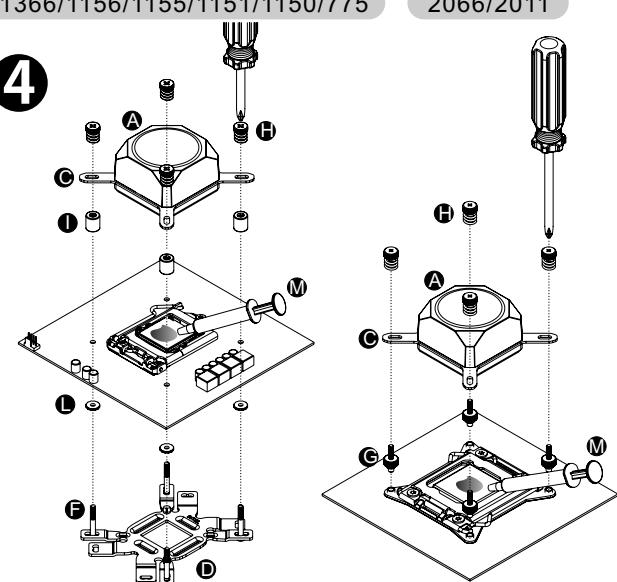

1366/1156/1155/1151/1150/775


2066/2011

* Please refer to the second page for MB SYNC installation.


AMD Installation Guide

1


- Ⓐ FM2/FM1/AM3+/AM3/AM2+/AM2
- Ⓑ AM4

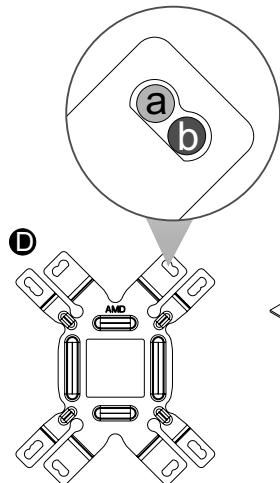


2

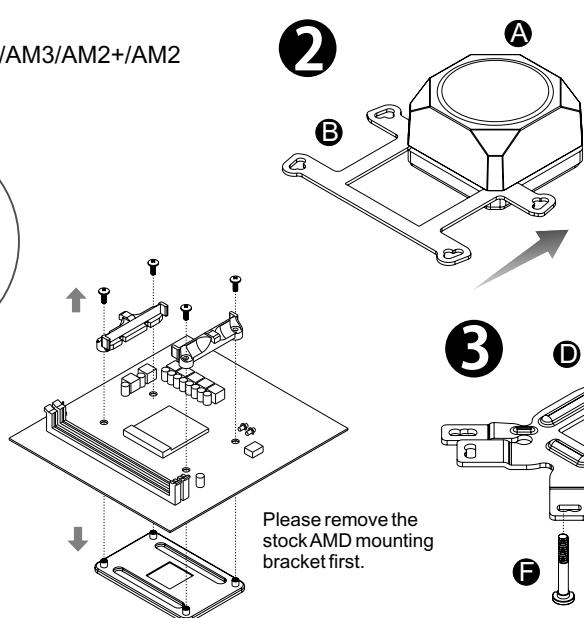

3

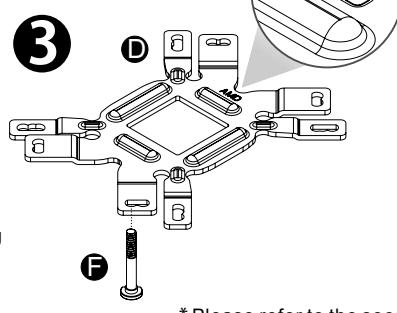

4

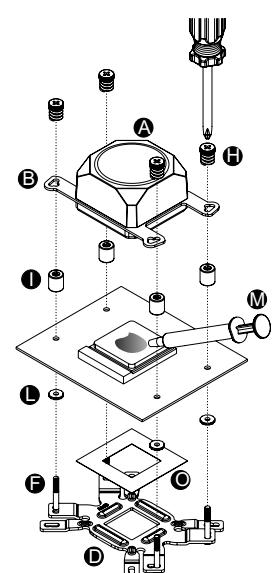


Please remove the stock AMD mounting bracket first.


* Please refer to the second page for MB SYNC installation.

Installation Guide

5

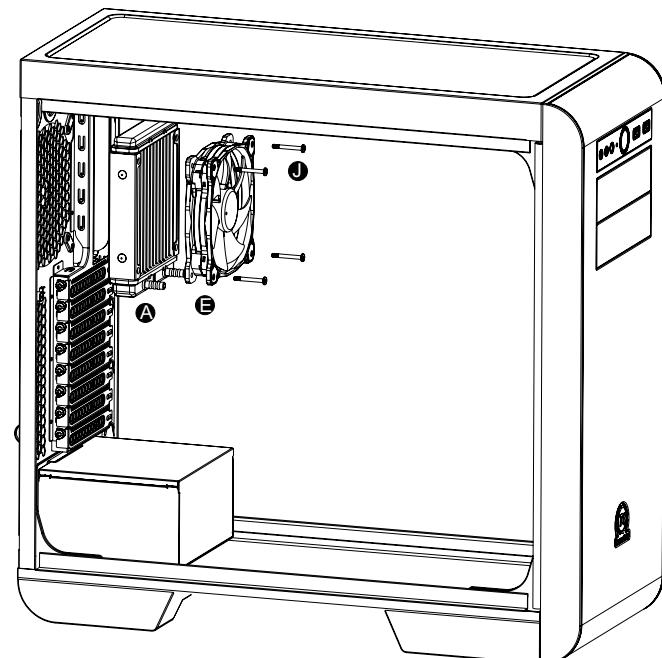


6

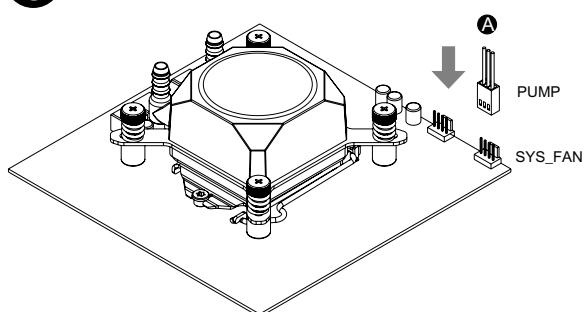


or


AMD

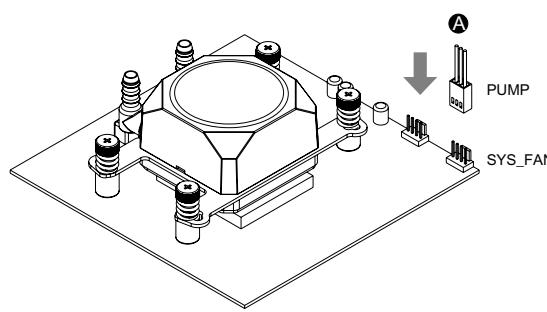

7

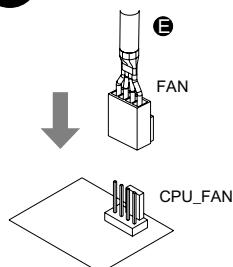


8

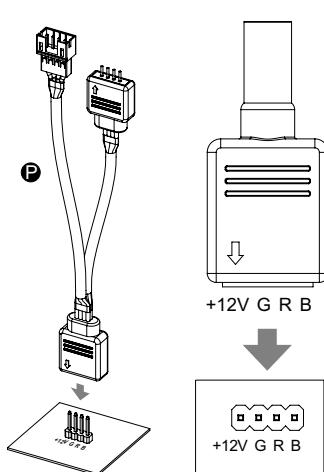

CAUTION

Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the controller.

9

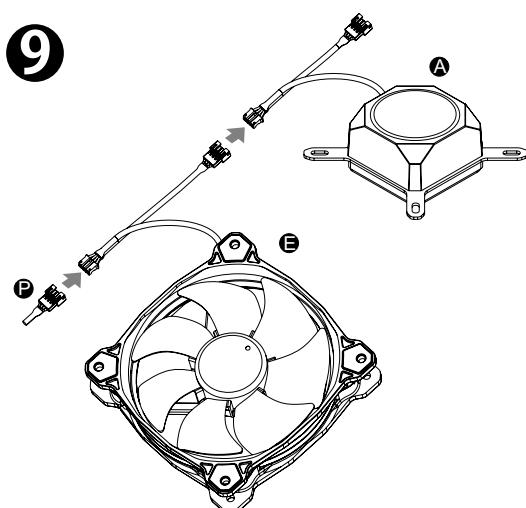

Connect the mainboard sync cable to mainboard.

Connect the mainboard sync cable to fan, and connect the water block in series.